

CoverCrakZ


PAINT RE-INFORCEMENT TISSUE

Easily covers cracks and stops flaking and peeling of painted surfaces

500mm WIDTH

- Eliminates unsightly cracks in plaster and masonry surfaces.
- Resists wear and weathering in our harsh climate.
- Extends the life of painted surfaces and reduce maintenance costs.
- Reinforces paint film structure.
- Inert glass fibre tissue that will not decay or deteriorate.
- Prestige surface protection.

USES Suitable for domestic and industrial situations including above ground steel pipelines, oil storage tanks, smooth-faced plastered house walls, hospital corridors, cracked ceilings, and many other similar applications. CoverCrakZ binds masonry surfaces, covering cracks and crevices, preventing flaking and peeling. Being loosely bonded, CoverCrakZ moves with the substrate and does not crack with this movement. It is also suitable for cracked ceilings.

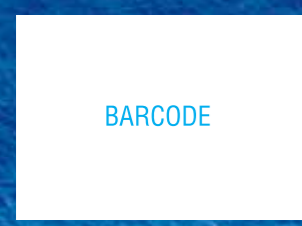

Application Instructions



Prepare surface by filling any large cracks and removing loose or flaking paint. Make sure the surface is clean, dry and dust free.



Apply a roller width of exterior grade paint in a horizontal strip at the top of the surface, which will hold the CoverCrakZ in place for the next step.



Apply a generous coat of paint over CoverCrakZ to adhere it to the surface. Repeat steps 2 to 4 to hang further drops until the desired area is covered.



Once the first coat is dry, apply a top coat of desired colour and surface texture to completely embed CoverCrakZ in the paint layer and cover the fibre pattern.

Safety Precautions: CoverCrakZ may cause irritation if it comes in contact with the skin, eyes or if inhaled. It is recommended that gloves are used when handling CoverCrakZ. For full specifications consult the CoverCrakZ Material Safety Data Sheet at www.reginaglass.com.au



handy hints

- ✔ To ensure your first drop of Cover-CrakZ is straight, use a plumb-line.
- ✔ Trim Cover-CrakZ with a cutting knife and straight edge rather than using scissors.
- ✔ Smooth joins will be achieved if the drops are butted edge to edge, rather than overlapped. To line up the vertical edges, leave a 50mm unpainted strip of the last drop of Cover-CrakZ, to which the next drop can be butted to. This is easier than trying to line up a wet edge and a dry edge. Then paint over the edges to join the drops.
- ✔ If overlapping occurs, sand off the top layer once the first coat of paint has dried to create a smooth join.
- ✔ If a crease appears, stop painting, quickly lift Cover-CrakZ and readjust the fibre.
- ✔ Smooth out small creases by working the paint roller in opposing diagonal directions.
- ✔ When applying CoverCrakZ into a corner, use a paint brush with a stippling action. When applying around a corner, ease Cover-CrakZ onto the new surface using the paint roller in a horizontal motion.

CoverCrakZ

REGINA
GLASS FIBRE TISSUE & VEIL

Regina Glass Fibre Pty Ltd
P.O. Box 539, Ballarat Victoria 3353, Australia
Telephone: +61 (03) 5339 2214 Facsimile: +61 (03) 5338 1013
Email: office@reginaglass.com.au Web site: www.reginaglass.com.au